

# MSA Accountability System Software Installation Instructions

The instructions below will enable you to download the latest (July 2010) version of the MSA Accountability System or update your current software for the following operating systems: Windows XP Service Pack 1 or higher, Windows 2000 Professional Service Pack 3 or higher, Windows 7 32 bit or Vista 32 bit. (See back for installation instructions for Windows 7 64 bit or Vista 64 bit).

1. Go to MSA's website, [www.msanorthamerica.com/catalog/product503274.html](http://www.msanorthamerica.com/catalog/product503274.html) to view MSA's Software Downloads page that includes MSA Accountability System software.

**IMPORTANT: Users of this software must be an administrator user registered with the PC. If you are not an administrator, please contact your PC administrator.**

2. Right click on MSA Accountability System, choose **Save (create file)**.
3. Locate the file you just saved and double-click.
4. On the WinZip Extractor screen, click **Setup**.
5. Click **Next** on the Install Wizard screen.
6. Read the license agreement, click **Accept** and click **Next**.
7. On the Setup screen, choose **New** to install for the first time or **Update Installation** to replace current installation version and retain incident files.
8. Select destination folder and click **Next**.
9. Click **Install** to begin the installation process.
10. When installation is complete, click **Finish**, then see Accountability user manual for operating instructions.

## PC SYSTEM REQUIREMENTS

### Minimum Hardware Requirements:

1 GHz Pentium III processor or equivalent / 256 MB RAM / USB 1.1 / 16 MB graphic card (resolution 1024 x 768 pixel, 256 colors) / 200 MB free disk space.

### Optimum Hardware Requirements (Preferred):

1.8 GHz Pentium IV processor or greater / 512 MB RAM / 32 MB AGP graphic card (resolution 1024 x 768 pixel or greater, 16,7 Mio colors, 2 RGB or DVI) / 1.5 GB free disk space.



# MSA Accountability System Software Installation Instructions

The instructions below will enable you to download the latest (July 2010) version of the MSA Accountability System or update your current software for the following operating system: Windows 7 64 bit or Vista 64 bit.

1. Go to MSA's website, [www.msanorthamerica.com/catalog/product503274.html](http://www.msanorthamerica.com/catalog/product503274.html) to view MSA's Software Downloads page that includes MSA Accountability System software.

**IMPORTANT: Users of this software must be an administrator user registered with the PC. If you are not an administrator, please contact your PC administrator.**

2. Right click on MSA Accountability System, choose **Save (create file)**.
3. Locate the file you just saved and double-click.
4. On the WinZip Extractor screen, click **Setup**.
5. Click **Next** on the Install Wizard screen.
6. Read the license agreement, click **Accept** and click **Next**.
7. On the Setup screen, choose **New** to install for the first time or **Update Installation** to replace current installation version and retain incident files.
8. Select destination folder and click **Next**.
9. Click **Install** to begin the installation process.
10. When installation is complete, click **Finish**, then see Accountability user manual for operating instructions.

Next, connect Hardware via USB port. A warning should appear stating that the driver device was not successfully installed. If this was appears, complete the following instructions:

1. Got to your **Control Panel**, then **Control Panel Items**.
2. Click on **Administrative Tools**.
3. In Administrative Tools click on **Computer Management**.
4. In Computer Management, under Other Devices, right-click on **Telemetry Transceiver Box**.
5. Click **Update Driver Software**.
6. In Driver Software, select **Browse my computer for driver software**.
7. Using the **Browse** button, select the location – **C:/Program Files(x86)MSA/MSA Accountability System**. **Be sure to put a check mark in the Include Subfolders Box before continuing**.
8. Click **Next**.
9. A screen should appear confirming successful update of the driver software. Close this screen. Installation is complete.

## PC SYSTEM REQUIREMENTS

### Minimum Hardware Requirements:

1 GHz Pentium III processor or equivalent / 256 MB RAM / USB 1.1 / 16 MB graphic card (resolution 1024 x 768 pixel, 256 colors) / 200 MB free disk space.

### Optimum Hardware Requirements (Preferred):

1.8 GHz Pentium IV processor or greater / 512 MB RAM / 32 MB AGP graphic card (resolution 1024 x 768 pixel or greater, 16,7 Mio colors, 2 RGB or DVI) / 1.5 GB free disk space.

**Corporate Headquarters**  
P.O. Box 426, Pittsburgh, PA 15230 USA  
Phone 412-967-3000  
[www.MSAnet.com](http://www.MSAnet.com)  
**U.S. Customer Service Center**  
Phone 1-800-MSA-2222  
Fax 1-800-967-0398

**MSA Canada**  
Phone 1-800-672-2222  
Fax 1-800-967-0398  
**MSA Mexico**  
Phone 01 800 672 7222  
Fax 52-44 2227 3943

**MSA International**  
Phone 412-967-3354  
Fax 412-967-3451